



BREEZE LED 360™

LED LIGHT & BATHROOM FAN

INSTALLATION INSTRUCTIONS


Breeze LED 360 Conversion Kit

990002-00: Breeze LED 360 Conversion Kit

CAUTION

Before replacing; switch power off at the service panel and lock service disconnecting means to prevent power from being switched on accidentally.

1. Remove light lens by pressing in and pulling down at snap locations.
2. Remove aluminum light reflector by rotating counter-clockwise. Disconnect the pigtail connection and discard reflector including light socket.
3. Install new LED light board by connecting the pigtail connectors and aligning the three (3) slots in the LED plate and plastic grill, then rotate clockwise until locked in place.
4. Re-install light lens.
5. Remove counter balanced damper from housing and discard. Install new damper making sure the ears on the damper are facing outwards.

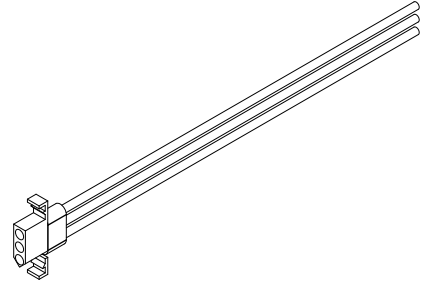

NOTE: ETL COMPLIANT WHEN USED IN V2280-50 OR V2280-75 PER ETL 3102500 AND 5010043



CONFORM TO UL STD 507,
CERT TO CSA STD C22.2 NO. 113

